



assembly instructions

Family: Plymouth | Item No. 4259 OB



Drawing 1 - Fixture Assembly

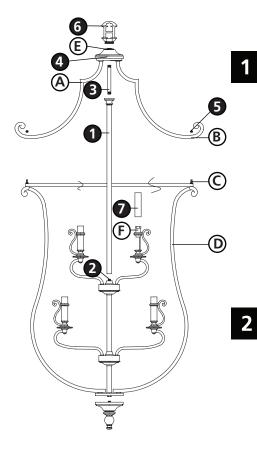

Vstart here

- 1. Find a clear area in which you can work.
- 2. Unpack fixture and glass from carton.
- 3. Carefully review instructions prior to assembly.

*** The construction of this fixture will be accomplished by first assembling the main body of the fixture, making all necessary electrical connections and hanging the fixture from the ceiling.

SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (I.S. 18) AND ANY ADDITIONAL DIRECTIONS. TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED **ELECTRICIAN OR LOCAL AUTHORITIES FOR CODE REQUIREMENTS.**


- 1. To assemble fixture, thread center column (1) onto threaded stem (2) see Drawing 1.
- 2. Thread top stem (3) into top of center column (1).
- 3. Take top spider assembly (4) and spread out arms (A) until they are equally spaced
- 4. Slip hole (B) in end of arms (A) over studs (C) on the top of cage assembly (D). Making sure center column stem (3) passes through center hole (E) of spider assembly (4).
- 5. Attach spider assembly (4) to cage assembly (D) with ball knobs (5) provided.
- 6. Thread loop (6) onto end of top center stem (3) and tighten.
- 7. Slip candle sleeve (7) over socket (F).
- 8. Thread bottom cover (8) onto base of cage assembly (D).
- 9. Please refer to the hanging instruction sheet (I.S. 19) provided to hang fixture.

12.01.08



I.S. 19 hanging instructions

Drawing 1 - Hanging Assembly

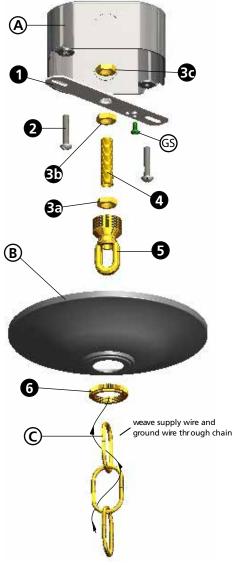

Ystart here

SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (I.S. 18) AND ANY ADDITIONAL DIRECTIONS. TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED **ELECTRICIAN OR LOCAL AUTHORITIES FOR CODE REQUIREMENTS.**

- 1. Shut off electrical current before starting. If the fixture you are replacing is turned on and off by a wall switch, simply turn the switch off. If not, remove the appropriate fuse (or open the circut breakers) until the fixture is dead.
- DO NOT restore current either by fuse, breaker or switch until the new fixture is completely wired and in place.
- 1. Fasten mounting strap (1) to outlet box (A) with the two 8-32 screws (NOT PROVIDED) (2) -see Drawing 1.
- 2. Thread 2 hex nuts (3a) and (3b) onto threaded tubing (4).
- 3. Thread one end of threaded tubing (4) into loop (5) a minimum of 1/2" to 3/4". Thighten hexnut (3a) against loop (5) to lock loop in position.
- 4. Thread other end of threaded tube (4) into mounting strap approximately 1/2".
- 5. Slip canopy (B) over loop (5) and adjust height of loop so half of the threaded area on the loop is exposed - see Drawing 2 below. After loop height is adjusted, thigten hex nut (3b) up against mounting strap, tighten against mounting strap to lock in position.
- 6. Remove mounting strap (1) from junction box (A), and thread third hex nut (3c) onto end of threaded tube (4) above the mounting strap, tighten against mounting strap to lock assembly in position.
- 7. Remount mounting strap to junction box.

- 1. Taking the chain, determine the length you require to hang the fixture.
- 2. Attach one end of the chain to the top loop of the fixture.
- 3. Now slip loop collar (6) and canopy (B) onto chain see DRAWING 2.
- 4. Attach other end of chain to loop (5). Get assistance for this step since fixture may be heavy and difficult to hold while attaching the chain.

Drawing 2 Canopy Adjustment



- 1. Unwrap supply wire and ground wire and weave them up through the chain.
- 2. Slip supply wire and ground wire through center of loop (5).
- 3. Connect ground wire to mounting strap (1) using green ground screw (GS).
- 4. Make electrical connections from supply wire to fixture lead wires. Refer to instruction sheet (I.S. 18) and follow all instructions to make all necessary wiring connections.
- 5. Slip canopy up firmly against the ceiling and secure by turning the threaded collar (6) on loop (5) until tight.






I.S. 18 wiring | grounding instructions

SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (I.S. 18) AND ANY ADDITIONAL DIRECTIONS. TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED **ELECTRICIAN OR LOCAL AUTHORITIES FOR CODE REQUIREMENTS.**


Drawing 1 - Flush Mount

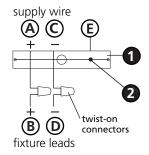

Drawing 2 - Chain Hung



Drawing 3 - Post-Mount

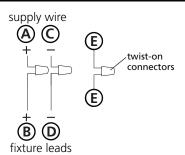

wiring instructions

Indoor Fixtures

- 1. Connect positive supply wire (A) (typically black or the smooth, unmarked side of the two-conductor cord) to positive fixture lead (B) with appropriately sized twist on connector - see Drawings 1 or 2.
- 2. Connect negative supply wire (C) (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture lead (D).
- 3. Please refer to the **grounding instructions** below to complete all electrical connections.

Outdoor Fixtures

- 1. Connect positive supply wire (A) (typically black or the smooth unmarked side of the two-conductor cord) to positive fixture lead (B) with appropriately sized twist on connector - see Drawings 2 or 3.
- 2. Connect negative supply wire (C) (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture lead (D).
- 3. Cover open end of connectors with silicone sealant to form a watertight seal.
- If installing a wall mount fixture, use caulk to seal gaps between the fixture mounting plate (backplate) and the wall. This will help prevent water from entering the outlet box. If the wall surface is lap siding, use caulk and a fixture mounting platform specially.
- 4. Please refer to the grounding instructions below to complete all electrical connections.

grounding instructions

Flush Mount Fixtures

For positive grounding in a 3-wire electrical system, fasten the fixture ground wire (E) (typically copper or green plastic coated) to the fixture mounting strap (1) with the ground screw (2) - see Drawing 1.

Note: On straps for screw supported fixtures, first install the two mounting screws in strap. Any remaining tapped hole may be used for the ground screw.

Chain Hung Fixtures

Loop fixture ground wire (E) (typically copper or green plastic coated) under the head of the ground screw (2) on fixture mounting strap (1) and connect to the loose end of the fixture ground wire directly to the ground wire of the building system with appropriately sized twist-on connectors - see Drawing 2.

Post-Mount Fixtures

Connect fixture ground wire (E) (typically copper or green plastic coated) to power supply ground with appropriately sized twist-on connector inside post. Cover open end of connector with silicone sealant to form a watertight seal - see Drawing 3.